


Installation Instructions - NW Disconnect For Leachate, Monitoring, and Remediation Pumping Applications

- Using correctly sized hole saw, drill thru one wall of the riser in alignment with the force main.
- Install inner gasket on the threaded NW tail.
- Install the NW tail thru hole in riser.
- Install outside gasket, backup washer & locknut, tighten lock nut until the NW tail is secure.
- Lubricate the o-ring and install into the o-ring groove in the NW head.

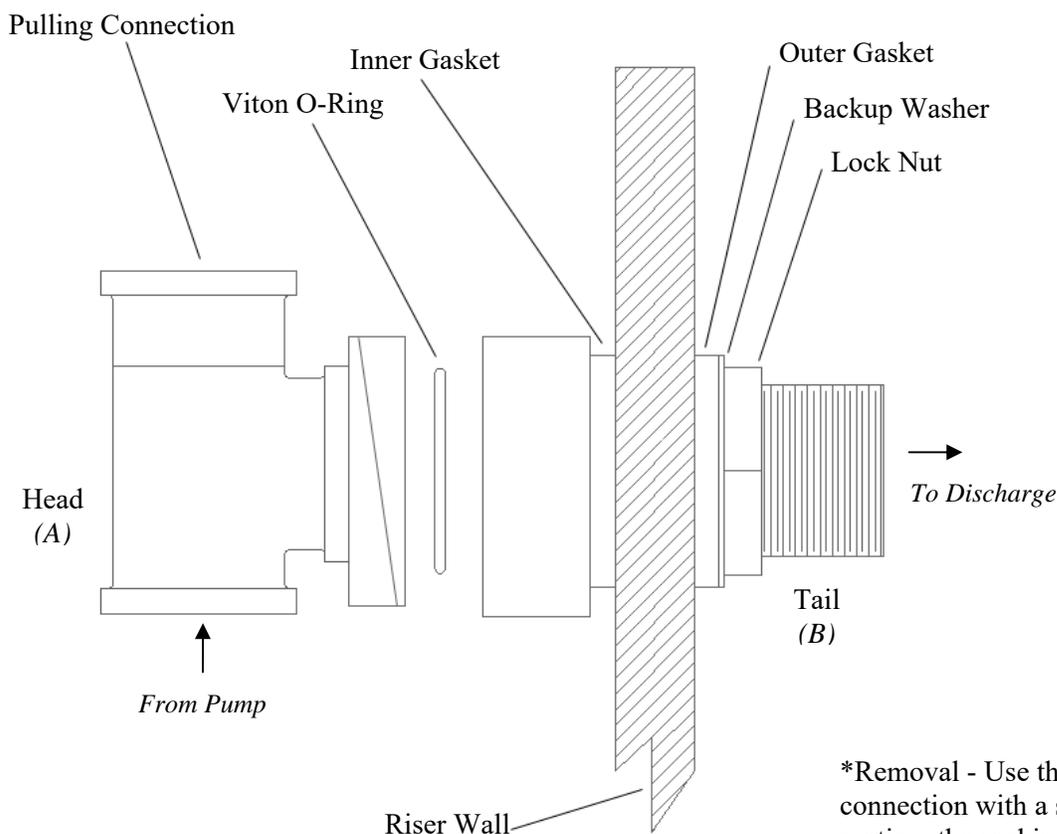

*Removal - Use the pulling connection with a slight rocking motion, the rocking motion helps unseat the taper.

MODEL	"A"	"B"	Hole Saw Size
NW1.5SS-C	1-1/2" NPT	1-1/2" NPT	2"
NW2SS-C	2" NPT	2" NPT	2-1/2"
NW3SS	3" NPT*	3" NPT	3-5/8"
NW4SS	4" NPT	4" NPT	4-3/4"
NW6SS	6" NPT*	6" NPT	6-3/4"



* Indicates Model Has 1.5" Pulling Connection